



STRICTLY CONFIDENTIAL - ONLY USED FOR THE PURPOSE
OF THIS COURSE. PLEASE DELETE IMMEDIATELY AFTER
ASSESSMENT. THANK YOU

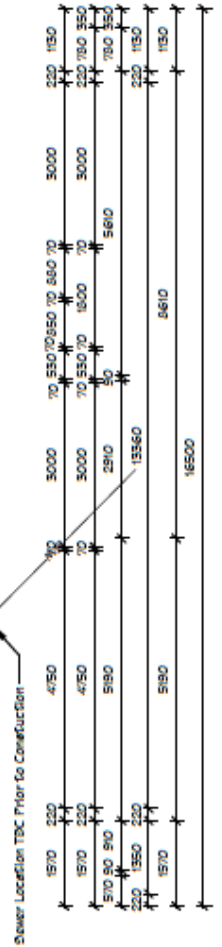

Standard Flyscreen to Ground floor sliding windows - Excluding front office window

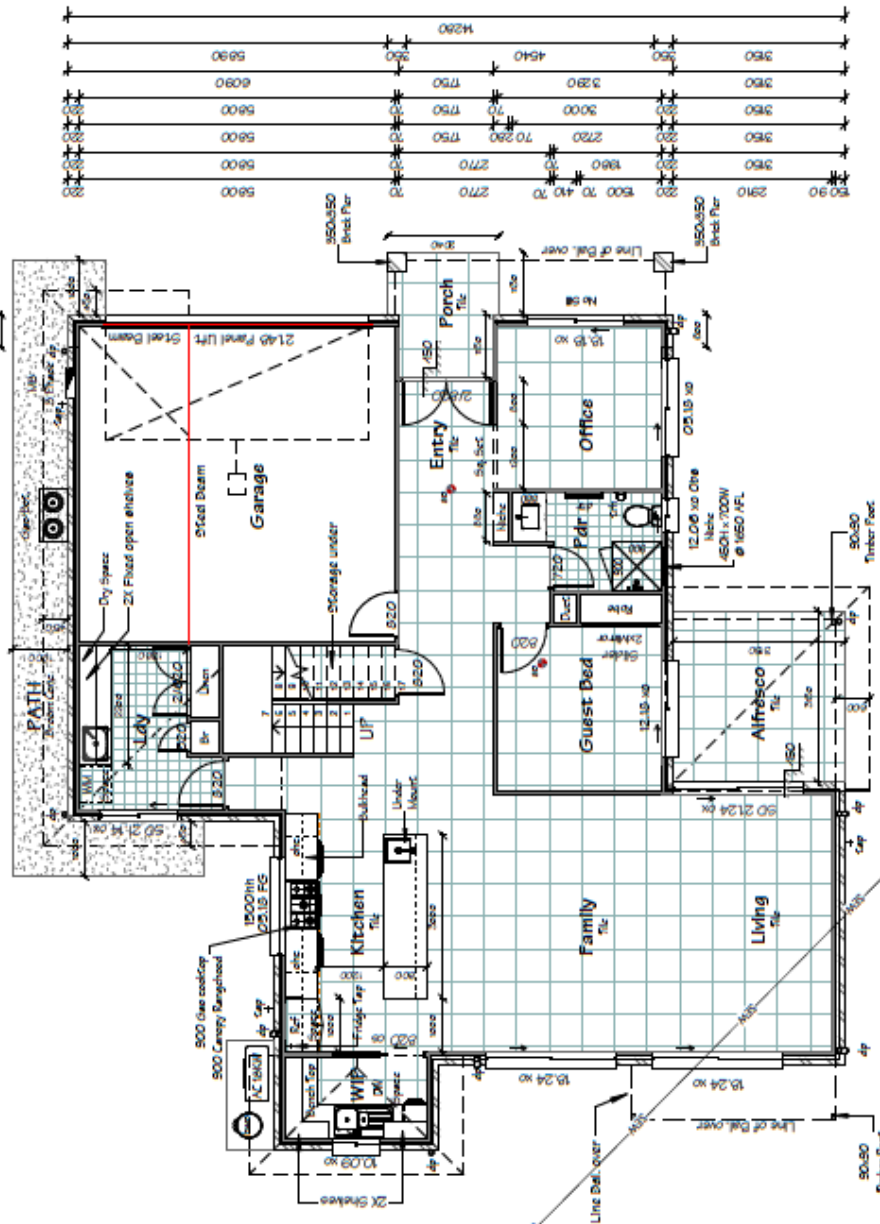

NOTES

- All disenclose shown on plan are to the Timber frame and bricework. Control joint positions are at 6m intervals encasing at full height window or door. Full height windows and doors are cleaned as control joint.

